


elecworks™ Tips & Tricks

Automatically Update Terminal Strips and Report Drawings

When you print, export your project to PDF or take a snapshot, elecworks has the ability to automatically update terminal strips and report drawings.

This is a user selection within your template project or current project allowing to either *Always* update, to *Ask Me* or *Never* update. This ensures that all related documentation is consistent with the rest of the documentation.

Right click over the current project > *Configurations* >  Project...
Select the *General* tab

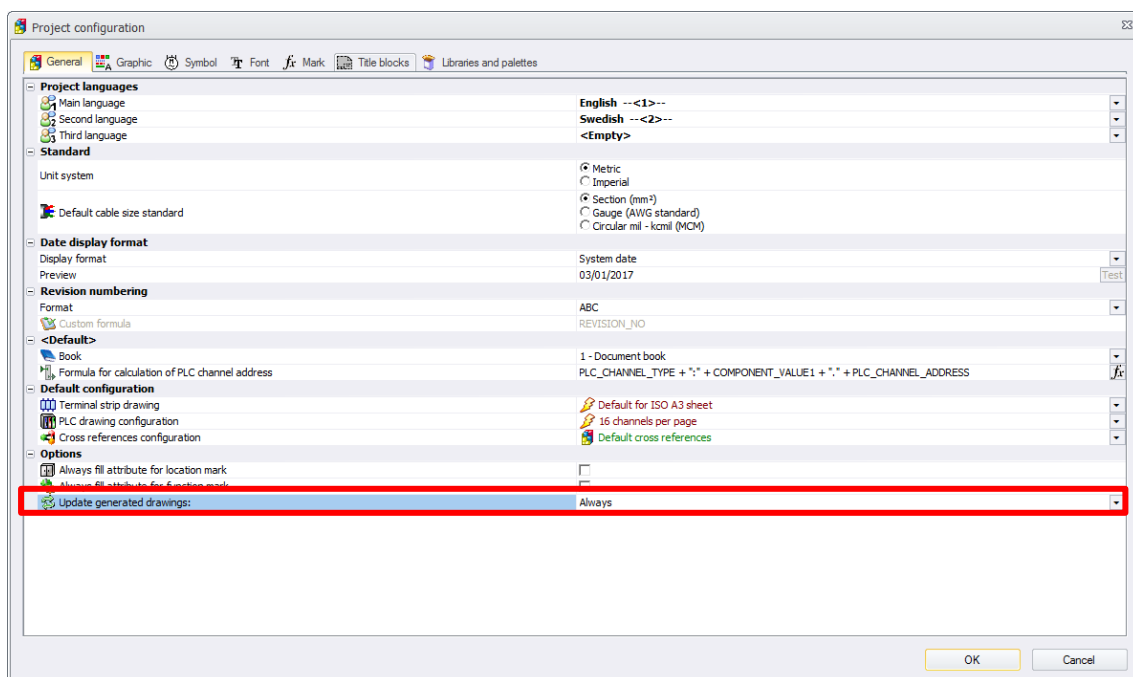

Select  to accept the changes

If the above change is made in the <<company name>> template project, then all new projects created using the template project will always adhere to the company's standards irrelevant of who created the project