

elecworks™ Tips & Tricks


Dimension Styles



Dimension styles

Dimension styles used for dimensioning your cabinet layout are defined in the option available from the *Tools* ribbon tab.


The default current style is set as STANDARD which is an Imperial variant.

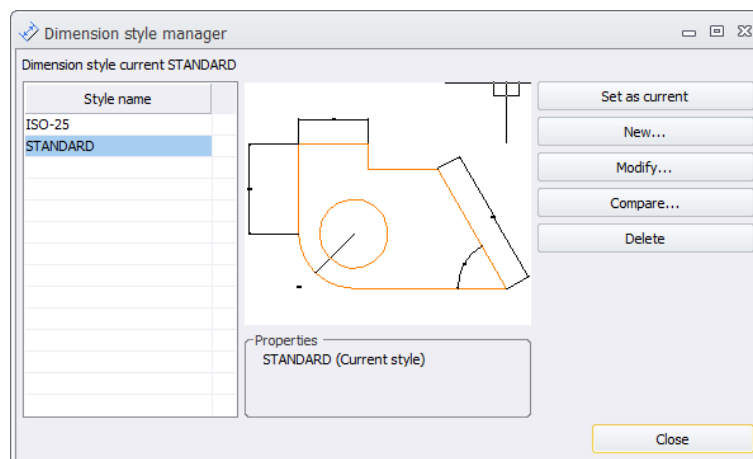


If you wish your style to be the Metric variant, highlight ISO-25 and then select

Select to change the values


An example may be that you would like to increase the offset of the extension line from the origin point

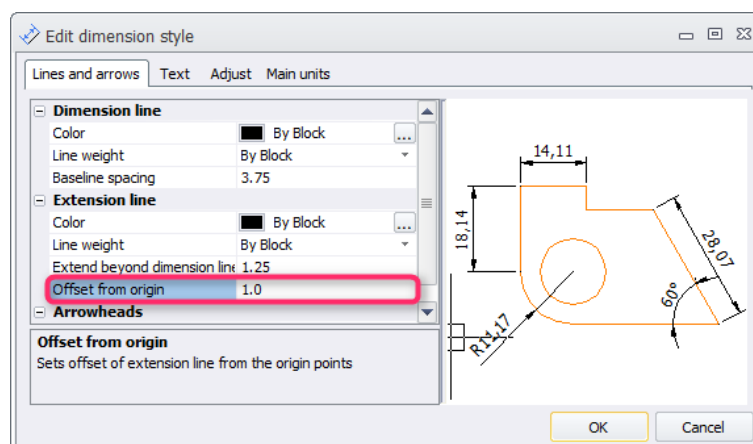

Or increase the text height to 5 so that the dimension text is more easily readable

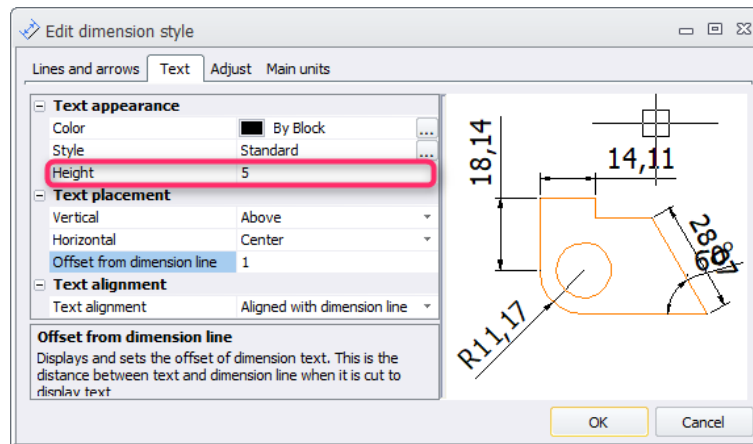

Or set the *Precision* in the *Main Units* to be "0,0"

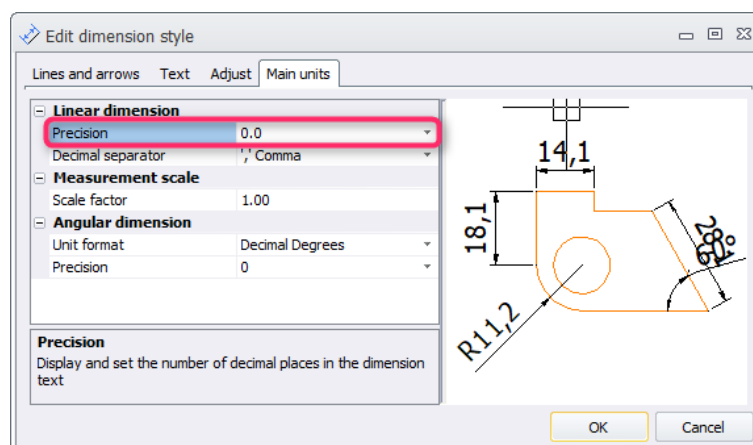

Select to accept the changes made

All NEW dimensions will be to the new style. Existing dimensions will not be updated.